


# QUICK PROGRAMMING GUIDE FOR DRAPERY RTS MOTORS

## DESCRIPTION

**Glydea 35e RTS, Glydea 60e RTS,  
Irisimo™ 35 Mini DC, Irisimo™ 45 WireFree RTS**

- Motor placement left or right and/or upside down installation
- New touch motion
- Comes in Dry contact with optional RTS plug-in module

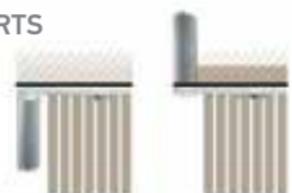

Standard Mounting Inverse Mounting



## BEFORE YOU BEGIN

Manually move drapery to a middle position along the track.  
This allows for movement of the motor in either direction.

## CONNECT POWER TO MOTORS



Glydea® motors are equipped with an integrated 120V AC NEMA power plug with a 10 ft. cable



Irisimo™ 35 Mini DC is equipped with a plug-in low voltage (24V DC) transformer.



Irisimo™ 45 WireFree RTS is equipped with a rechargeable (26.5V DC) battery.

## PROGRAMMING THE RTS CONTROL POINT

**STEP 1:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously on the RTS transmitter until the drapery jogs.

**STEP 2:** Briefly press OPEN/UP  or CLOSE/DOWN , the drapery automatically runs to record both hard stop positions.

## CHECKING THE DIRECTION OF OPERATION

**STEP 1:** Press the RTS transmitter OPEN/UP  button.

- If the drapery opens, the direction of rotation is correct, go to STEP 3.

- If the drapery closes, the direction of rotation is incorrect, go to STEP 2.

**STEP 2:** Press the  (STOP) button until the drapery jogs: the direction of rotation has been modified. Press the OPEN/UP  button to check the direction of rotation.



**STEP 3: Recording the RTS Transmitter:** Press the PROGRAMMING BUTTON on the back of the RTS transmitter until the drapery jogs. The RTS transmitter is now recorded.

Press the OPEN/UP  button or CLOSE/DOWN  button to operate drapery.

# QUICK PROGRAMMING GUIDE FOR DRAPERY RTS MOTORS

## SETTING INTERMEDIATE PREFERRED “MY” POSITION

### Recording “my” favorite position:

**STEP 1:** To set the “my” (STOP) position, move the drapery to the desired intermediate position with the OPEN/UP  or CLOSE/DOWN  buttons.

**STEP 2:** Press the  (STOP) button until the drapery jogs to confirm setting.

### Delete the “my” position:

To delete the “my” (STOP) position, move the drapery to the current “my”  (STOP) position, then press the  (STOP) button until the drapery jogs.

## ADJUSTING THE LIMITS

**STEP 1:** Press the OPEN/UP  or CLOSE/DOWN  button to move the drapery to the limit to be re-adjusted.

**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

**STEP 3:** Press and hold the OPEN/UP  or CLOSE/DOWN  buttons to move the drapery to the new desired position.

**STEP 4:** To confirm the new limit, press and hold the  (STOP) button until the drapery jogs.

## MODIFYING THE MOTOR ROTATION DIRECTION

**STEP 1:** Press OPEN/UP  or CLOSE/DOWN  button to move the drapery away from the limit:

**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

**STEP 3:** Press the  (STOP) button until the drapery jogs to reverse the rotation direction.

## QUICK PROGRAMMING GUIDE FOR DRAPERY RTS MOTORS

DRY CONTACT MODE SETTING (does not apply to Irismo™ 45)

**STEP 1:** Press OPEN/UP  or CLOSE/DOWN  button to move the drapery away from the limit.

**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

**STEP 3:** Press the  (STOP) and CLOSE/DOWN  buttons simultaneously until the drapery jogs.

### ACTIVATING THE TOUCH MOTION FEATURE

**NOTE:** The Glydea by default does not have the touch motion feature activated.

**STEP 1:** Press OPEN/UP  or CLOSE/DOWN  button to move the drapery away from the limit.

**STEP 2:** Press and hold the OPEN/UP  and CLOSE/DOWN  button simultaneously until the drapery jogs.

**STEP 3: NOTE - Be sure to follow the steps associated with your desired sensitivity setting.**

#### To activate the Standard Sensitivity Setting (more sensitive)

Press the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs (total of 2 jogs) then proceed to Step 4.

#### To activate the Low Sensitivity Setting (less sensitive)

Press the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs once. Then press the OPEN/UP  and CLOSE/DOWN  buttons simultaneously until the drapery jogs again (total of 3 jogs). Proceed to Step 4.

**STEP 4:** Press the  (STOP) button until the drapery jogs to confirm the setting.

# QUICK PROGRAMMING GUIDE FOR DRAPERY RTS MOTORS

## ADJUSTMENT OF SPEED SETTING

**STEP 1:** Press and hold both the  (STOP) and OPEN/UP  buttons simultaneously until the drapery starts to open and close automatically.

**STEP 2:** Press OPEN/UP  to increase speed, CLOSE/DOWN  to decrease speed.

**STEP 3:** Press the  (STOP) button until the drapery jogs to confirm the setting.

## DELETING SPECIFIC CHANNELS/TRANSMITTERS



**STEP 1:** Using a paperclip or pen, press and hold the PROGRAM BUTTON on the previously addressed transmitter until the drapery jogs.



*Step 1 should not be performed with the transmitter intended for deletion.*



**STEP 2:** Select the desired channel (1-4 or all) or transmitter (single channel) to be deleted.



**STEP 3:** Press and hold the PROGRAM BUTTON on the transmitter until the drapery jogs. Channel or transmitter is now deleted from the drapery memory and will not operate the drapery.

## DELETING PREVIOUS SETTING

To delete all the transmitters programmed and retain limit setting, press and hold the receiver PROGRAM BUTTON until the drapery jogs twice.



**Resetting completely the memory of the motor,** press the receiver's PROGRAM BUTTON until the drapery jogs 3 times. All the settings are erased.